Schaller
Messtechnik / humimeter.com

Moisture meter

Operating Manual

humimeter BP1

Moisture meter for measuring the moisture content of wood pellets




78,0 °F | 6,16% | 456 kg/m³ | −27,3 td | 0,64 aw | 51,9 %r.H. | 14,8 %abs | 100,4 g/m² | 09 m/s | 4,90 Ugl | 1

Version 3.1

Always read this operating manual before using the humimeter BP1!


Your humimeter BP1 at a glance

The main unit

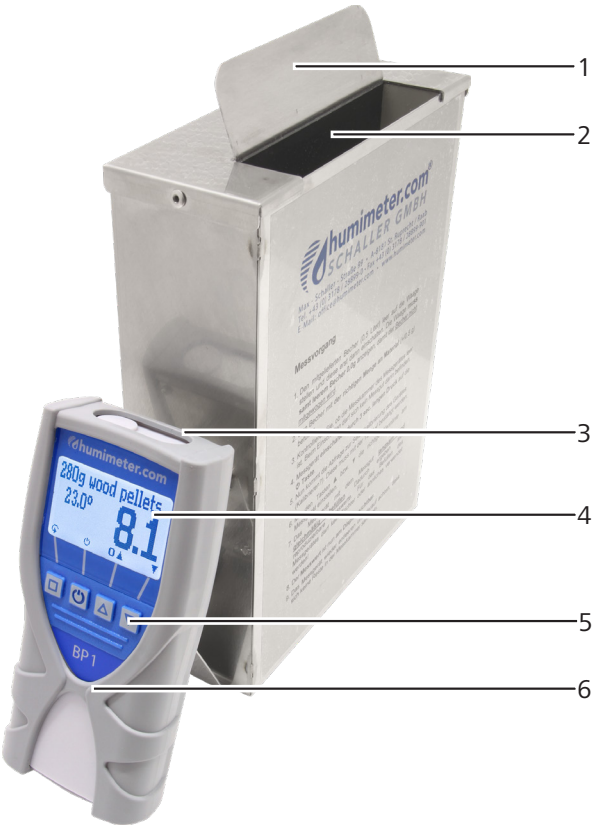

No.	Name
1	Filling auxiliary plate
2	Measuring chamber
3	USB port (optional)
4	Display
5	Keypad
6	Rubber protection cover

Rear of the main unit

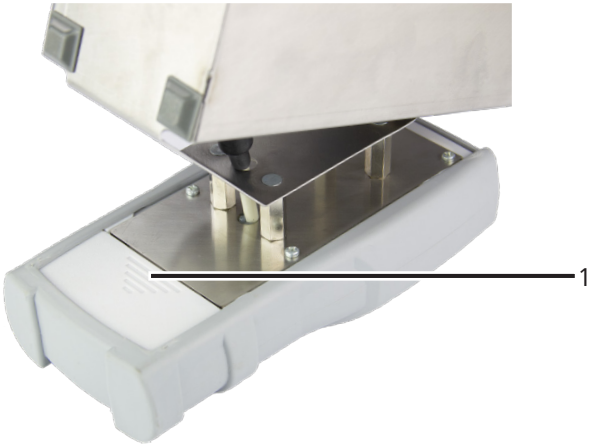

No.	Name
1	Battery compartment

The display



No.	Name
1	Product type
2	Moisture content in % ("6.2 How moisture content is defined")
3	Display symbols
4	Temperature display

The display symbols


Symbol	Name
	Enter
	Up
	Down
	Back
	Enter numbers
	Enter letters
	Continue / go right
	Left
	Yes

Symbol	Name
	No
	Change input level
	OK
	Change menu
	Enter data
	View measurements
	Delete measurements
	On/off button, display light
	Save measured value

The menus


The device has three different menus: product selection, Data Log and main menu.

Product selection menu

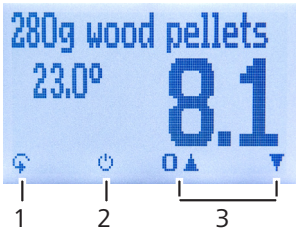

No.	Name
1	Change menu
2	Display illumination / device on/off
3	For changing the product type

Data Log menu

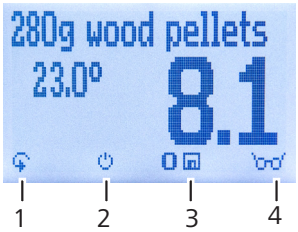

No.	Name
1	Change menu
2	Display illumination / device on/off
3	Save measured value
4	Show the last recorded values

Main menu

The main menu comprises the following menu items:

- **Edit Logs:**
  Manual Logs, Clear Logs
- **Print Logs:**
  Last Log, All Logs, Clear Logs
- **Send Logs:**
  Manual Logs, Clear Logs
- **Options:**
  Bluetooth, Date/Time, Language, Unlock, °C/°F, BL On Time, Auto Off Time, Materialcalibration, Online Send, Online Print, Password, Reset
- **Status**

Table of contents

Your humimeter BP1 at a glance 2

The main unit 2

Rear of the main unit 3

The display 3

The display symbols 4

The menus 4

1. Introduction 9

1.1 Information about this operating manual 9

1.2 Limitation of liability 9

1.3 Symbols used in this manual 10

1.4 Customer service 10

2. For your safety 11

2.1 Proper use 11

2.2 Improper use 11

2.3 User qualifications 11

2.4 General safety information 12

2.5 Warranty 12

3. On receipt of your device 12

3.1 Taking the device out of its packaging 12

3.2 Making sure that all of the components have been included 12

3.3 Inserting batteries 13

4. Using the device - Basics 14

4.1 Switching the device on 14

4.2 Automatic calibration 14

4.3 Selecting the product type 15

4.4 Taking a measurement 15

4.5 Switching the device off 15

5. The measuring process 16
5.1 Preparing a measurement 16
5.2 Taking a measurement 17
5.3 Saving individual readings 18
5.4 Saving several readings (a measurement series) at the same time 19
5.5 Viewing individual readings 21
5.6 Viewing individual readings from a series of measurements 21
5.7 Deleting all measured values (data log) 22
5.8 Deleting individual measurement series 22
5.9 Deleting individual values from a single series of measurements 23
6. Product types 24
6.1 Definition of the product types 24
6.2 How moisture content is defined 24
7. Using the LogMemorizer program 25
7.1 Installing / opening the program 25
7.2 Exporting measured values to a computer 25
8. Checking the device's status 28
9. Configuring the device 29
9.1 Turning on Bluetooth 29
9.2 Adjust the date/time 29
9.3 Selecting a language 30
9.4 Activating options 30
9.5 Deactivating options 31
9.6 Selecting °C/°F 31
9.7 Reducing the device's power consumption 31
9.7.1 Configuring the display illumination time 31
9.7.2 Configuring automatic switch-off 32
9.8 Configuring the material calibration function 32

9.9 Online functions 33
9.9.1 Online Send 33
9.9.2 Online Print 33
9.10 Changing the password 34
9.11 Resetting the device to its factory settings 35
10. Cleaning and maintenance 35
10.1 Changing batteries 35
10.2 Checking the calibration 36
10.2.1 Checking the scale 36
10.2.2 Checking the device 36
10.3 Care instructions 37
10.4 Cleaning the device 38
11. Faults 39
12. Storage and disposal 40
12.1 Storing the device 40
12.2 Disposing of the device 40
13. Device information 41
13.1 EC declaration of conformity 41
13.2 Technical data 42
14. Notes 43

1. Introduction

1.1 Information about this operating manual

This operating manual is designed to enable you to use the humimeter BP1 safely and effectively. It is part of the device, has to be stored nearby and must be easily accessible to users at all times.

All users are required to carefully read and make sure that they have understood this operating manual before using the humimeter BP1. All of the safety and operating instructions detailed in this manual have to be observed to ensure the safety of the device.

1.2 Limitation of liability

All of the information and instructions provided in this operating manual have been compiled on the basis of the current standards and regulations, the state of the art, and the extensive expertise and experience of Schaller GmbH.

Schaller GmbH does not accept any liability for damage associated with the following, which also voids the warranty:

- Non-observance of this operating manual
- Improper use
- Inadequately qualified users
- Unauthorised modifications
- Technical changes
- Use of unapproved spare parts

This fast measuring procedure can be affected by a range of different factors. For this reason, we recommend periodically checking the device's measurements with a standardised oven-drying method.

We, as the manufacturer, do not accept any liability for any incorrect measurements and associated consequential damage.

1.3 Symbols used in this manual

All of the safety information provided in this manual is shown with a corresponding symbol.

ATTENTION

It is essential to observe this warning. Non-compliance can lead to damage to property or equipment.

Information

This symbol indicates important information that enables users to use the device more efficiently and cost effectively.

1.4 Customer service

For technical advice, please contact our customer service department at

Schaller GmbH
Max-Schaller-Straße 99
A - 8181 St.Ruprecht an der Raab

Telephone: +43 (0)3178 28899
Fax: +43 (0)3178 28899 - 901

E-mail: info@humimeter.com
Internet: www.humimeter.com

© Schaller GmbH 2019

2. For your safety

The device complies with the following European directives:

- Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS)
- Electromagnetic compatibility (EMC)

The device corresponds to state-of-the-art technology. However, it is still associated with a number of residual hazards.

These hazards can be avoided through strict observance of our safety information.

2.1 Proper use

- Easy to use device for quickly measuring the moisture content of wood pellets
- The device must only be used for taking measurements on the products defined in the following sections of this manual (see "6. Product types").

2.2 Improper use

- The device must not be used in ATEX.
- The device is not waterproof and must be protected from water and fine dust.

2.3 User qualifications

The device must only be operated by people who can be expected to reliably take the measurements. The device must not be operated by people whose reaction times may be slowed due to, e.g. the use of drugs, alcohol or medication.

All persons using this device must have read, understood and follow the instructions provided in the operating manual.

2.4 General safety information

The following safety information has to be observed at all times to avoid damage to objects and injury to people:

- Remove the batteries if the device is not used for a prolonged period of time (4 weeks).
- In case of damages or loose parts on the device, remove the batteries and contact Schaller GmbH or your dealer.

All of the device's technical features have been inspected and tested before delivery. Every device has a serial number. Do not remove the tag with the serial number.

2.5 Warranty

The warranty does not apply to:

- Damage resulting from non-observance of the operating manual
- Damage resulting from third-party interventions
- Products that have been used improperly or modified without authorisation
- Products with missing or damaged warranty seals
- Damage resulting from force majeure, natural disasters, etc.
- Damage from improper cleaning
- Damage due to leaking batteries

3. On receipt of your device

3.1 Taking the device out of its packaging

- Take the device out of its packaging.
- Next, make sure that it is not damaged and that no parts are missing.

3.2 Making sure that all of the components have been included

Make sure that all of the components have been included by checking the package contents against the following list:

- humimeter BP1
- 4 pieces of AA Alkaline batteries
- Digital scale 500 grams

- Measuring cup 0.5 liter
- Plastic case
- Rubber protection cover
- Operating manual

Optional accessories:

- humimeter USB data interface module - USB stick with software and USB cable
- Battery operated portable thermal printer (only possible together with humimeter USB data interface module) - Described in a separate operating manual
- Bluetooth module (only possible together with humimeter USB data interface module) - Described in a separate operating manual

3.3 Inserting batteries





1. Remove the rubber protection cover. To do so, hold the rubber protection cover at the upper side and pull it over. If your device is provided with an optional USB port, remove the protection cap of the USB socket before (figure 1 and 2).




2. Take hold of the device with one hand, press your thumb onto the engraved area of the battery compartment (1) and drag downwards (2) (figure 3).



3. Insert the batteries with negative and positive terminals matching those indicated on the battery compartment. Press down the batteries so that they lay flat on the bottom of the housing (figure 4).

» As soon as all batteries have been inserted, the device switches on automatically.

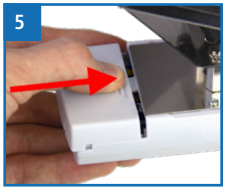

4. Push the battery cover onto the housing until it clicks into place (figure 5). Then mount the rubber protection cover onto the housing, beginning at the end where the battery compartment is situated.


4. Using the device - Basics

4.1 Switching the device on

- Press the button for 3 seconds.
- The display will then show the status indicator (figure 6).

» After inserting the batteries, the device switches on automatically.


6

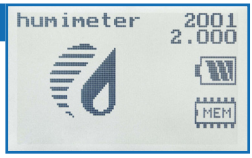

4.2 Automatic calibration


» The display will show the message **Adjust?** (figure 7).

7

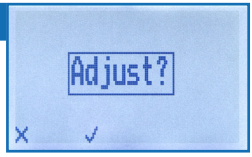

1. Make sure that the measuring chamber of the device is empty and place the device on a level table.
2. Confirm by pressing .

8

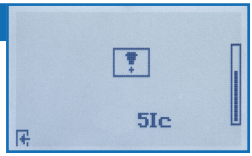

» The display will now appear as shown in figure 8.

» The bar will run upwards. During this period, the device must remain on the table without external influence,

» which only takes a couple of seconds to complete.

» Once completed, the device will show the measuring window (see "Product selection menu" page 4).

4.3 Selecting the product type

To do so: The device has to be in the product selection menu (figure 9).

For an overview of the different product types and the criteria for selecting them, please refer to "6. Product types".

1. Press the ▽ or △ button to move from one product type to the next Or
2. Press the ▽ or △ button for 3 seconds to open the product type overview (figure 10).
3. Use the arrow keys to move from one product type to the next
4. and keep any of them pressed to scroll through the types.
5. Confirm your selection by pressing ↵.

» The product type you selected will now be shown at the top of the display.

9



10



4.4 Taking a measurement

- For information on how to take a measurement, see section "5. The measuring process".

4.5 Switching the device off

To do so: The device has to be in the product selection or Data Log menu. It is not possible to switch off the device when it is in the main menu.

- Press the ⏻ button for 3 seconds.

5. The measuring process

5.1 Preparing a measurement

To do so: The device has to have nearly the same temperature than the product being measured. It is recommended to let your humimeter device adjust to the surrounding temperature of the material being measured for at least 30 minutes.

1. Place the empty, clean measuring cup (0.5 liter) on the switched-off scale (figure 11). Then switch on the scale.

» The scale must display 0.0 g with the empty measuring cup on it. The measuring cup must not be weighed.

2. Check whether the measuring chamber of the device is empty. When the device is switched on, there must not be any material in it.

» Empty the instrument and clean the measuring chamber if necessary (see "10.4 Cleaning the device").

3. Switch on the device (see "4.1 Switching the device on").

4. Effect the automatic calibration (see "4.2 Automatic calibration").

5. Select the required product type (see "6. Product types") by pressing the  or  button (see "4.3 Selecting the product type").

11



12



13



5.2 Taking a measurement

To do so: The device has to have nearly the same temperature than the product being measured.



1. Fill the measuring cup with the filling quantity displayed in the product type name (+/- 1.0 g) (figure 15) (see "6. Product types").
2. Now slowly and evenly fill the measuring chamber of the device with the material being measured (figure 15).
   - » For the filling, no funnel or similar device may be used.
3. The device will now display the moisture content (figure 16).
   - » The displayed value flashes when the moisture content exceeds the measuring range of the selected product type (figure 17). A flashing value signals a decreasing accuracy of the measurement. The measuring range is dependent on the product type (see "6. Product types").
   - » Once the reading has been taken, it can be saved on the device (see "5.3 Saving individual readings" or "5.4 Saving several readings (a measurement series) at the same time").
4. Empty the device and make sure that there are no residues in the measuring chamber.
   - » Clean the measuring chamber if necessary (see "10.4 Cleaning the device").







Information - Measuring accuracy

This rapid and non-destructive measuring procedure allows you to quickly take several moisture readings of the same sample material. When saving the individual readings, the device will automatically calculate the readings' average (see "5.4 Saving several readings (a measurement series) at the same time").

Information - Incorrect readings

Always make sure to select the correct product type and the correct filling quantity for the material you are measuring. This prevents taking incorrect readings (see "11. Faults").

5.3 Saving individual readings

The device is configured in such a way that the device will save a reading every time a button is pressed.

To do so: The device has to be in the Data Log menu (see "Data Log menu" page 5).

1. Press .

   » The display will now appear as in figure 19 and the disc symbol will be preceded by the digit one.

2. Press to enter a name for the saved reading and to finish the measuring process.

   » The display will now appear as shown in figure 20.

3. The data you have inputted can be overwritten at any time.

4. Inputting letters:
   Press and hold A..Z to quickly scroll to the required letter and either press it for 3 seconds or pres to confirm the selected letter (figure 21).

5. Inputting numbers:
   Press and hold 0..9 to quickly scroll to the required number and either press it for 3 seconds or press to confirm the selected number.

6. Moving forward/back:
   Press to switch to another input level. Press or to move forward or back.

7. Confirm your entry by pressing .

   » The data you entered has been saved.


18




19



20

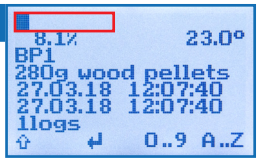

21

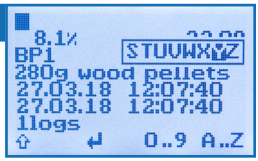


5.4 Saving several readings (a measurement series) at the same time

To do so: The device has to be in the Data Log menu (see "Data Log menu" page 5).


1. Take several measurements of the same sample material (see "5. The measuring process").
2. To save a reading, press [icon] as soon as the reading has been taken.
   - » The display will now appear as shown in figure 22. This number shows the number of readings that have already been saved.



3. Press [icon] to enter a name for the saved series of measurements and to finish the measuring process.
   - » The display will now appear as shown in figure 23.

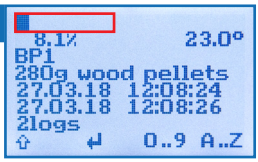


4. The data you have inputted can be overwritten at any time.
5. Inputting letters:
   Press and hold A..Z to quickly scroll to the required letter and either press it for 3 seconds or press [icon] to confirm the selected letter (figure 24).

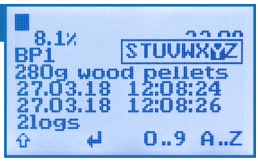

6. Inputting numbers:
   Press and hold 0..9 to quickly scroll to the required number and either press it for 3 seconds or press [icon] to confirm the selected number.
7. Moving forward/back:
   Press [icon] to switch to another input level. Press [icon] or [icon] to move forward or back.
8. Confirm your entry by pressing [icon].
   - » The data you entered has been saved.
   - » The device automatically determines the average moisture content of the saved measuring values.

» The display will show the following information:

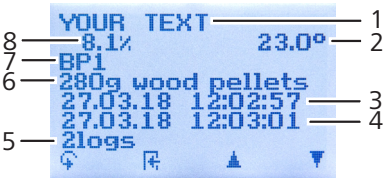


No.	Name
1	Name of the measurement series (editable)
2	Temperature (average)
3	Date & start time of the measurement series
4	Date & end time fo the measurement series
5	Number of saved readings
6	Product type
7	Device name
8	Moisture content (average)

5.5 Viewing individual readings

To do so: You must have saved a reading (e.g. **1 log**)
The display will now appear as shown in figure 25.



1. Press .
2. Select the required reading. To do so, press or .
   » The display will now appear as shown in figure 26.
   » Press to leave this screen.

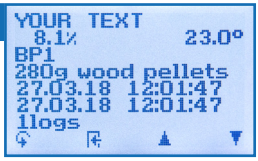


5.6 Viewing individual readings from a series of measurements


To do so: You must have saved a series of measurements (e.g. **2 logs**).
The display will now appear as shown in figure 27.



1. Press .
2. Select the required reading. To do so, press or .
   » The display will now appear as shown in figure 28.
3. Press to switch to another input level.
   » The display will now appear as shown in figure 29.
4. Press again.
   » The display will now appear as shown in figure 30.
5. Navigate to the required reading (**No.: 1, No.: 2, No.: 3**). To do so, press or .
6. Press to leave this screen.

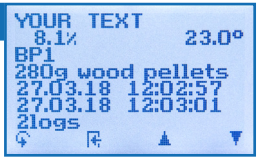



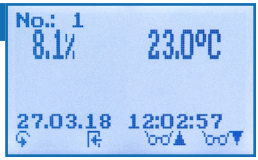

5.7 Deleting all measured values (data log)

To do so: You must have taken and saved one or several readings.

1. Press twice or hold for 2 seconds.
2. Select **Edit Logs** (figure 31). To do so, press or and confirm by pressing .
3. Select **Clear Logs** (figure 32). To do so, press or and confirm by pressing .
   » The display will show the message **clear?** (figure 33).
4. Confirm by pressing .
   » The data log has been deleted.
5. Press to leave the **Edit Logs** menu.
6. Press to leave the main menu.


31



32



33

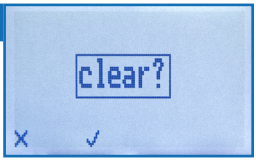

5.8 Deleting individual measurement series


To do so: You must have saved a measured value (e.g. **1 log**) or a series of measurements (e.g. **3 logs**). The display will now appear as shown in figure 34.

1. Press .
   » The display will now appear as shown in figure 35.
2. Select the required reading. To do so, press or .
3. Press to switch to another input level.
   » The display will now appear as shown in figure 36.
4. Press .


34



35

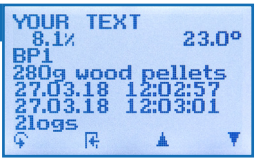


36

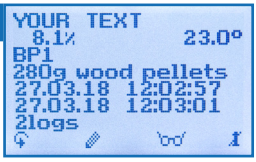

» The display will then show the message **clear?** (figure 37).

5. Confirm by pressing ✓.

» The value has been deleted.

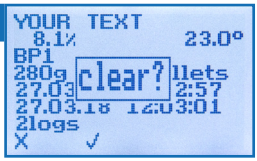37


5.9 Deleting individual values from a single series of measurements

To do so: You must have saved a series of measurements comprising at least 2 logs. The display will now appear as shown in figure 40.

1. Press 👓.

» The display will now appear as shown in figure 39.

2. Select the required reading. To do so, press ▼ or ▲.

3. Press ↻ to switch to another input level.

» The display will now appear as shown in figure 40.

4. Press 👓.

» The display will now appear as shown in figure 41.

5. Select the required measured value. To do so, press 👓▲ or 👓▼.

6. Press ↻ to switch to another input level.

» The display will now appear as shown in figure 42.


7. Press 🗑 to delete the value shown.


» The display will then show the message **clear?** (figure 43).


8. Confirm by pressing ✓.


» The value has been deleted.


38

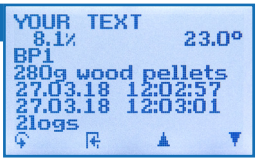
39

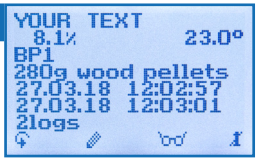
40

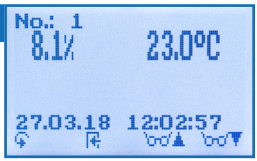
41

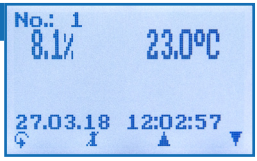
42

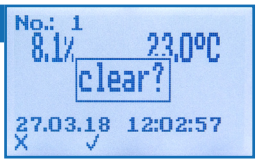
43


6. Product types

Product name	Filling quantity	Product type	Measuring range
280g wood pellets	280g	Wood pellets	3 % - 20 %
250g special pellets 1	250g	Special pellets	3 % - 20 %
250g special pellets 2	250g	Special pellets	3 % - 20 %
250g special pellets 3	250g	Special pellets	3 % - 20 %
Reference	! Only for testing the moisture meter !		

6.1 Definition of the product types

280g wood pellets

For measuring the moisture content of ø6 mm and ø8 mm wood pellets with a maximum length of 30 mm.

250g special pellets

If you do not want to measure wood pellets (or wood pellets with a lower bulk density), you must determine the water content according to the oven-drying method EN ISO 18134-2 once per material being measured and assign this to a calibration curve (special pellets 1 to 3). To do this, you must fill the device and switch through all three calibration curves. Select the calibration curve with the smallest deviation to the water content according to the oven-drying method.

6.2 How moisture content is defined

The device measures and shows a material's moisture content. The moisture content readings it displays are calculated in relation to the material's overall mass:

$$\%WG = \frac{M_n - M_t}{M_n} \times 100$$

M_n: Mass of the sample with average moisture content

M_t: Mass of the sample with zero moisture content

%WG: Moisture content (in accordance with the corresponding product norms)

7. Using the LogMemorizer program

To do so: The device is provided with USB interface, and the USB stick with LogMemorizer software and USB cable are available.


7.1 Installing / opening the program

1. Insert the USB stick with the LogMemorizer program into the USB port on your computer.
2. Open the **setup** application.
3. Follow the installation instructions.
4. Open LogMemorizer.

» The screen will now display the LogMemorizer's interface (figure 44).

» Before using LogMemorizer, please refer to the the separate LogMemorizer operation manual for the correct configuration of the USB COM Port.

44

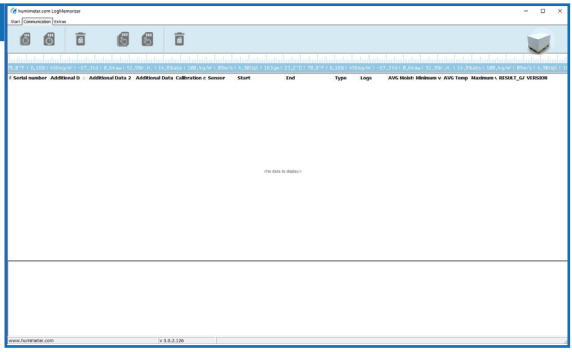

For more information on LogMemorizer, please refer to the separate LogMemorizer operating manual supplied with the device.

7.2 Exporting measured values to a computer

To do so: LogMemorizer must be installed. And you must have taken and saved one or several moisture readings.

Options: You can export moisture readings from the humimeter BP1 or initiate the export at your computer.

Exporting moisture readings from the humimeter BP1

Connect the humimeter BP1 to your computer using the supplied USB cable:

1. Insert the USB Mini B connector into the humimeter BP1 (figure 45).
2. Insert the USB connector into the computer.
3. Open LogMemorizer on your computer.
4. Switch on the humimeter BP1.
5. Press twice or hold for 2 seconds.
6. Select **Send Logs** (figure 46). To do so, press or and confirm by pressing .
7. Select **Manual Logs** (figure 47). To do so, press or and confirm by pressing .

» The display will then show the message **Send** (figure 48).

» All of the measuring values saved on the humimeter BP1 will now be sent to your computer.

45




46



47



48

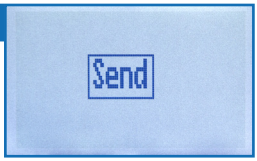

Initiating the data export at your computer

Connect the humimeter BP1 to your computer using the supplied USB cable:

1. Insert the USB Mini B connector into the humimeter BP1 (figure 49).
2. Insert the USB connector into the computer.
3. Open LogMemorizer on your computer.
4. Switch on the humimeter BP1.
5. Open the **Communication** tab in LogMemorizer (figure 50).

49



50




6. Select and click on one of the two buttons shown in figure 51.

» **Import all manual logs** (for importing all manually saved readings) or

» **Import most recent manual log** (for importing the most recent manually saved logs).

51

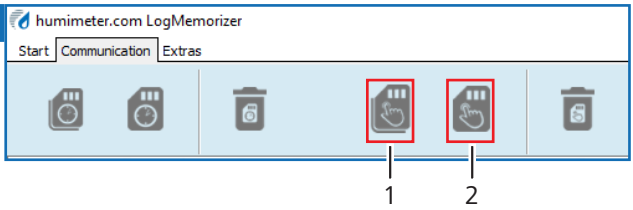


No.	Name
1	Import all manual logs
2	Import most recent manual log

» The measuring values saved on the humimeter BP1 will now be sent to your computer.

8. Checking the device's status

1. Press  twice or hold for 2 seconds.
2. Select **Status**. To do so, press  or  and confirm by pressing .
   - » The display will then show the status indicator **humimeter**.
   - » The display will show the following information:

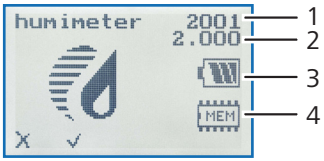

No.	Name
1	Serial number
2	Software version
3	Battery status
4	Memory status

3. Confirm by pressing .
4. Press  to leave the main menu.


9. Configuring the device

9.1 Turning on Bluetooth


The information on Bluetooth is provided in a separate operating manual.

9.2 Adjust the date/time

1. Press twice or hold for 2 seconds.
2. Select **Options**. To do so, press or and confirm by pressing .
3. Select **Date/Time**. To do so, press or and confirm by pressing .
   - » The display will now appear as shown in figure 52.
   - » The format for the date is **DD-MM-YY** (Day-Month-Year).
   - » The format for the time is **hh:mm:ss** (Hour:Minutes:Seconds).

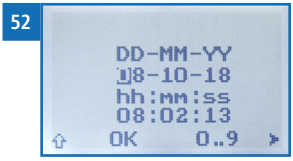

52

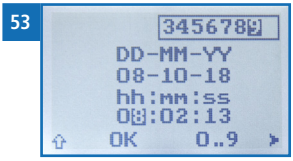

53

4. Inputting numbers:
   Press and hold 0..9 to quickly scroll to the required number and either press it for 3 seconds or press to confirm the selected number (figure 53).
5. Moving forward:
   To move forward between **DD-MM-YY** and **hh:mm:ss**, press .
6. Moving back:
   Press to switch to another input level. To move backward between **DD-MM-YY** and **hh:mm:ss**, press .
7. Confirm the date/time by pressing OK.
   - » The settings have been saved.
8. Press to leave the **Options** menu.
9. Press to leave the main menu.

9.3 Selecting a language

1. Press twice or hold for 2 seconds.
2. Select **Options**. To do so, press or and confirm by pressing .
3. Select **Language**. To do so, press or and confirm by pressing .
4. Navigate to the required language. To do so, press or and confirm by pressing .

» The settings have been saved.

5. Press to leave the **Options** menu.
6. Press to leave the main menu.

9.4 Activating options


To do so: Some of the options must be deactivated.

1. Press twice or hold for 2 seconds.
2. Select **Options**. To do so, press or and confirm by pressing .
3. Select **Unlock**. To do so, press or and confirm by pressing .

» The display will now appear as shown in figure 54.


» On delivery, the four-digit password is the device's serial number.

54

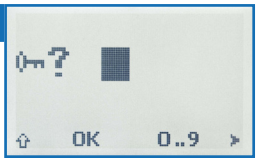

4. Inputting numbers:
   Press and hold 0..9 to quickly scroll to the required number and either press it for 3 seconds or press to confirm the selected number (figure 55).

55

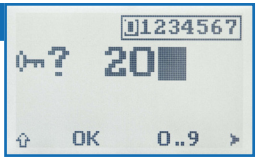

5. Moving back:
   Press to switch to another input level.
   To move back, press .
6. Confirm the four-digit password by pressing OK.

» The setting has been saved.

» The **°C/°F, BL On Time, Auto Off Time, Materialcalibration, Online Send, Online Print, Password, Reset** options are now activated.

7. Press  to leave the **Options** menu.
8. Press  to leave the main menu.

9.5 Deactivating options

Once the device has been switched restarted, the **°C/°F, BL On Time, Auto Off Time, Materialcalibration, Online Send, Online Print, Password, Reset** options will be deactivated again.

9.6 Selecting °C/°F

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **°C/°F**. To do so, press  or  and confirm by pressing .
4. Navigate to the required temperature scale, i.e. Celsius (**°C**) or Fahrenheit (**°F**). To do so, press  or  and confirm by pressing .

» The setting has been saved.

5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

9.7 Reducing the device's power consumption

9.7.1 Configuring the display illumination time

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .

3. Select **BL On Time**. To do so, press  or  and confirm by pressing .
4. Select the required display illumination period (30 seconds, 2 minutes, 5 minutes, 10 minutes). To do so, press  or  and confirm by pressing .

» The setting has been saved.

5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

9.7.2 Configuring automatic switch-off

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Auto Off Time**. To do so, press  or  and confirm by pressing .
4. Select the period of time you want the device to stay switched on (3 minutes, 5 minutes, 10 minutes). To do so, press  or  and confirm by pressing .

» The setting has been saved.

5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

9.8 Configuring the material calibration function

The type calibration function is described in a separate operating manual.

9.9 Online functions

9.9.1 Online Send

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Online Send**. To do so, press  or  and confirm by pressing .
   - » The setting has been saved.
   - » The device now automatically sends the stored measured value to the PC each time the memory button is pressed.
4. Press  to leave the **Options** menu.
5. Press  to leave the main menu.

9.9.2 Online Print

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Online Print**. To do so, press  or  and confirm by pressing .
   - » The setting has been saved.
   - » The device now automatically prints out the stored measured value each time the memory button is pressed.
4. Press  to leave the **Options** menu.
5. Press  to leave the main menu.

9.10 Changing the password

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Password**. To do so, press  or  and confirm by pressing .

   » The display will show the current password.

4. Overwrite the current password. To do so, press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.

   Moving back:
   Press  to switch to another input level.
   To move back, press .

5. Confirm the new four-digit password by pressing .

   » The setting has been saved.


6. Press  to leave the **Options** menu.
7. Press  to leave the main menu.

9.11 Resetting the device to its factory settings

To do so: All of the options must be activated (see "9.4 Activating options").

1. Press twice or hold for 2 seconds.
2. Select **Options**. To do so, press or and confirm by pressing .
3. Select **Reset**. To do so, press or and confirm by pressing .
   » The display will then show the message **Reset?** (figure 56).
4. Confirm by pressing .
   » The device will now be reset to its factory settings. All of your personal settings will be lost.
   » The display will show the status indicator **humimeter** (figure 57).
   » Resetting the device will not affect the saved measuring values.

56

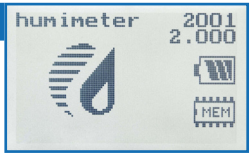
57


10. Cleaning and maintenance

Regularly cleaning and maintaining the device will ensure that it will have a long service life and stay in good condition.


10.1 Changing batteries


The device constantly monitors the charge level of the batteries. The current battery status is shown on the status screen.

If the battery´s charge is very low, the battery symbol will be shown with an exclamation mark. In that case, the batteries must be changed immediately (figure 59).

For changing the batteries, see section "3.3 Inserting batteries".

As the device's user, you are responsible by law for properly disposing of all used batteries, which must not be disposed of as domestic waste (Battery Directive).

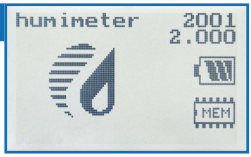58

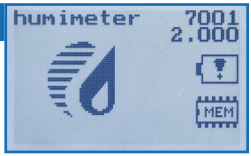
59


10.2 Checking the calibration

The device's calibration should be checked every four weeks. For the check, the optionally available test equipment (article no. 11758) is required.

10.2.1 Checking the scale

1. Switch on the scale.
2. Place the test weight on the scale (figure 60).
3. The scale should show a value of 500.0 g now (figure 61).

» If the balance displays a value with a deviation of more than 0.5 g, the balance can be readjusted (see manual of the scale).

60



61



10.2.2 Checking the device

To do so: The device as well as the test equipment must have a temperature between 17.0 °C and 23.0 °C.

1. Make sure that the measuring chamber of the device is empty.


» Empty the instrument and clean the measuring chamber if necessary (see "10.4 Cleaning the device").

2. Switch on the device (see "4.1 Switching the device on").
3. Effect the automatic calibration (see "4.2 Automatic calibration")
4. Select the product type „Reference" by pressing the arrow keys (see "4.3 Selecting the product type") (figure 62).
5. Place the empty, clean measuring cup (0.5 liter) on the switched-off scale. Then switch on the scale.

» The balance must display 0.0 g with the empty measuring cup on it. The measuring cup must not be weighed.

6. Fill the measuring cup with 400 gram glass beads (figure 63).

62

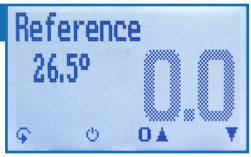

63



7. Now slowly and evenly fill the measuring chamber of the device with the 400 gram glass beads (figure 64).


64

» For the filling, no funnel or similar device may be used.

» The shown measuring value has to be between 11.2 and 12.2 (figure 65). If the displayed measuring value is out of this range, please contact Schaller GmbH or your dealer.



65

8. Fill another 400 gram of glass beads into the measuring cup.

» The glass beads filled into the device in point 7 must remain in the device.

» It is not possible to weigh 800 g of glass beads at once, as the scale has a maximum weighing range of 500 g and will be damaged if overloaded.



66

9. Now slowly and evenly fill the measuring chamber of the device with the another 400 gram of glass beads.

» For the filling, no funnel or similar device may be used.

» The shown measuring value for 800 gram glass beads has to be between 19.8 and 20.8 (figure 66). If the displayed measuring value is out of this range, please contact Schaller GmbH or your dealer.

10.3 Care instructions

- Do not leave the device out in the rain. The device is not waterproof.
- Do not expose the device to extreme temperatures.
- Protect the device from strong mechanical shocks and loads.
- Remove the batteries after the harvesting season.

10.4 Cleaning the device

ATTENTION

Do not clean with fluids

Water or cleaning fluid getting inside the device can destroy the device.

► Only clean with dry materials.

Plastic housing

- Clean the plastic housing with a dry cloth.

Measuring chamber

- Clean the measuring chamber with a soft brush.

11. Faults

If the measures listed below fail to remedy any faults or if the device has faults not listed here, please contact Schaller GmbH.

Fault	Cause	Remedy
Measuring error	The temperature of the material being measured is too low or high. I.e. the material's temperature is lower than 0 °C or higher than +40 °C.	The temperature of the material being measured has to be between 0 °C and +40 °C.
	Temperature discrepancy between device and material being measured	Let the temperature adjust to the material being measured (permitted difference of max. 3 °C).
	Wrong product type	Check whether you have selected the right product type (product) before taking a reading (see "6. Product types").
	Wrong filling quantity	Exactly fill in the filling quantity displayed in the product type name (+/- 1.0 gram).
	Mouldy or rain wet material	The accuracy decreases significantly.
	Frozen material or material mixed with snow	The accuracy decreases significantly.
	Contaminated material	Highly contaminated material such as long ears of barley or foreign material can strongly influence the measuring result.
Data transfer to LogMemorizer failed	Interface has not been configured	The interface only has to be configured once. To do so, press the F1 key on your computer and read the Help file for your LogMemorizer program.


12. Storage and disposal

12.1 Storing the device

The device must be stored as follows:

- Do not store outdoors.
- Store in a dry and dust-free place.
- Protect the device from sunlight.
- Avoid mechanical shocks/loads.
- Remove the batteries if the device is not used for a period of 4 weeks or longer
- Storage temperature: -20 °C to +60 °C

12.2 Disposing of the device

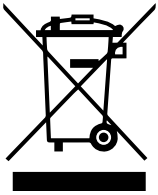

Devices marked with this symbol are subject to Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE).
If the device is being operated outside the European Union, the national regulations on the disposal of such devices that apply in the country of use must be observed.

Electronic devices must not be disposed of as domestic waste.

The device must be disposed of appropriately using appropriate collection systems.

13. Device information

13.1 EC declaration of conformity

CE DECLARATION OF CONFORMITY

We **Schaller GmbH**
Max-Schaller-Straße 99
A – 8181 St. Ruprecht

in accordance with the following Directives:

EMV - Richtlinie 2014/30/EU,
RoHS - Directives 2011/65/EG,

hereby declare that the following product types:

Product: **humimeter**

Types: **FS1, FS1.1, FS2, FS3, FS4, BM1, BM2, BP1**

are in conformity with the applicable requirements of the following documents

- **EN 61326–1:2013** Electrical equipment for measurement, control and laboratory use – EMC requirements
- **EN 50581:2012** Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances:

I hereby declare that the equipment named above has been designed to comply with the relevant Sections of the above referenced specifications. The unit complies with all applicable Essential Requirements of the Directives.

St. Ruprecht a.d. Raab, 21.03.2016

Max Schaller

Schaller GmbH
Maximilian Schaller
General Manager

13.2 Technical data

Display resolution	0.1 % moisture content, 0.5 °C/°F temperature
Measuring range	3 % to 20 % moisture content
Operating temperature	0 °C to +40 °C
Storage temperature	-20 °C to +60 °C
Temperature compensation	Automatic
Data memory	Up to 10,000 measuring values
Power supply	4 x 1.5 Volt AA Alkaline batteries
Current consumption	60 mA (incl. display illumination)
Menu languages	German, English, French, Italian, Spanish, Portuguese, Czech, Polish, Russian, International
Display	128 x 64 illuminated matrix display
Device dimensions	260 x 70 x 250 mm
Device weight	1,300 g
Case dimensions	450 x 360 x 106 mm
Weight of device + case	3,180 g
Device IP rating	IP 40

14. Notes



Climate
Environment



Materials



Food



Buildings



Bioenergy



Paper / Board

Schaller Messtechnik develops, produces and sells professional moisture meters and turnkey solutions.

Schaller GmbH

Max-Schaller-Straße 99, A - 8181 St. Ruprecht an der Raab

Tel +43 (0)3178 - 28899 , Fax +43 (0)3178 - 28899 - 901

info@humimeter.com, www.humimeter.com